


LUNA BELT INSTRUCTION



SCAN FOR VIDEO TUTORIAL

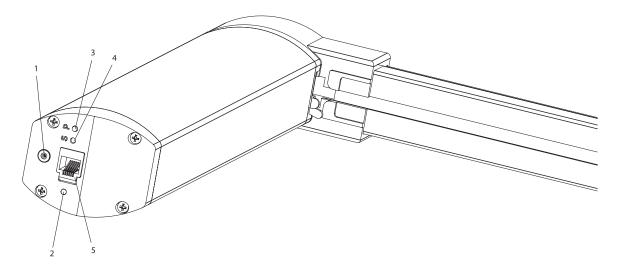

I/O Summary


- 1. Magnetic charging connector
- 2. Status LED
- 3. PROG button
- 4. SET button
- 5. SCM port

Light Signals

Green Light	Blink Twice	Command received/ Wake from deep sleep
	Solid	Pairing mode
	Constant Blinking	Limit setting mode
Red Light	Blink Twice	Enter deep sleep mode
	Solid	Error / Flat battery
	Constant Blinking	Low battery


How to Set Limit

Before Set up: Make sure the curtain is at the open position.

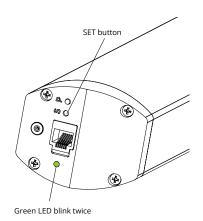


1. Turn on Luna Belt

Press and hold the *SET* button until the *Status LED* blinks green twice.

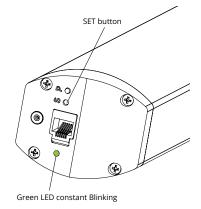

2. Turn on limit setting mode

Tap the **SET** button again until the **Status LED** constantly blinks green.

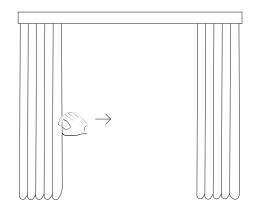

3. Pull Fabric to set limit


Pull the fabric towards the close position. Motor will automatically move the curtain to the fully close position, then reverse to the fully open position. Upon detecting both positions, the limit is saved automatically.






How to Pair Luna Belt to Remote

Before Set up: Make sure the motor is on

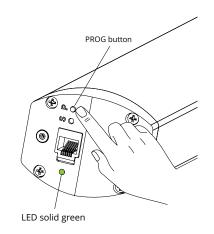

P1 P2 P3

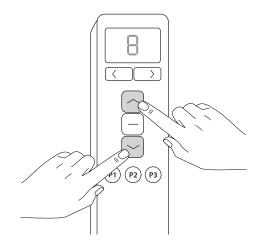

1. Turn on Pairing Mode

Press and hold the **PROG** button until the *Status LED* is solid green.


2. Choose Desire Channel

to select desire channel number.


3. Set Channel

On your remote, use $\begin{cases} \begin{cases} \begin{c$ simultaneously. After 3-5 seconds, the Status LED on motor will flash green again, pairing is now complete.

How to Delete Current Channel

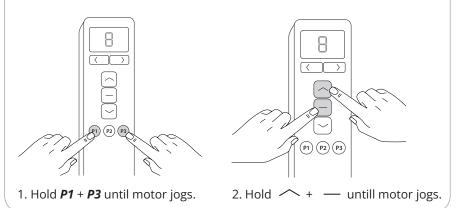



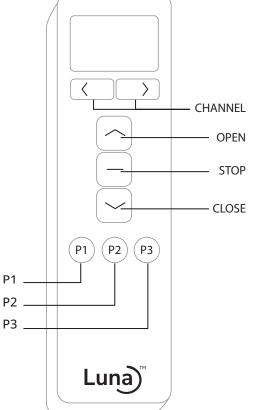

How to Delete All Channels

