


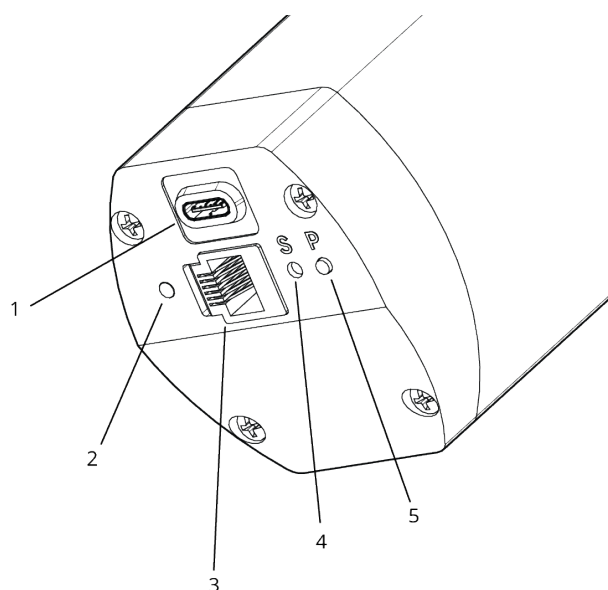

Status LED Light Signals

Green Light	Blink Once	Command received/ Wake from deep sleep
	Solid	RF Pairing mode
Red Light	Blink Twice	Enter deep sleep mode
	Solid	Error / Flat battery
	Constant Blinking	Low battery

I/O Summary

1. Charging Port
2. Status LED
3. PROG button
4. SET button
5. SCM port

Quick Fixes & Motor Care

Battery Charging

- Use a standard USB Type C charging cable.
- Any USB charger can be used provided that it is certified and rated for at least 1A.
- When charging, the **Status LED** will be solid amber.
- The **Status LED** will turn off once fully charged.

Deep Sleep Mode

The motor has a deep sleep mode to prevent limit setting issues if multiple motors are paired to the same RF channel.

Wake up from deep sleep mode

Hold down the **PROG** button until the **Status LED** blinks green twice to wake up from deep sleep mode.

Enter deep sleep mode

Hold down the **PROG** button until the **Status LED** blinks amber twice to enter deep sleep mode.

Factory Reset

Factory reset process will clear all limits of the motor including paired RF channels.

- 1.Ensure the **Status LED** is off.
- 2.Press and hold the **PROG** button until the **Status LED** turns solid green.
- 3.Pull down on the **Pull Switch** until the **Status LED** blinks amber twice.

Pair Luna Belt to Remote


SCAN FOR VIDEO TUTORIAL



! BEFORE YOU START


Make sure the Luna Roll motor is turned on ON.

1 Turn on Pairing Mode

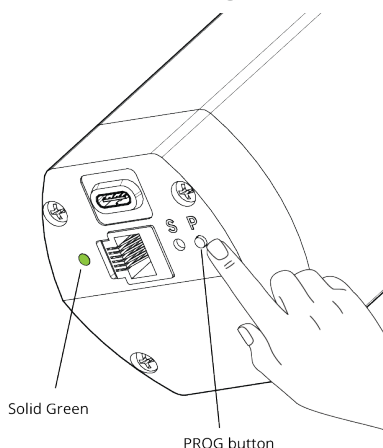


Press and hold the **PROG** button until the **Status LED** is solid green.

2 Choose Desire Channel

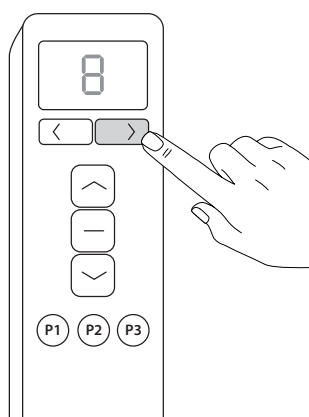

On your remote, use & to select desire channel number.

3 Set Channel

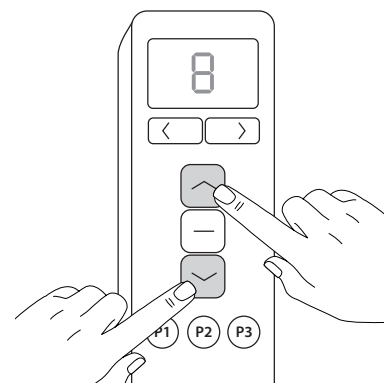


Hold down and button simultaneously. After 3-5 seconds, the **Status LED** on motor will flash green again, pairing is now complete.

How to Set Limit

! BEFORE YOU START


Make sure the curtain is at the open position.

1 Turn on Luna Belt

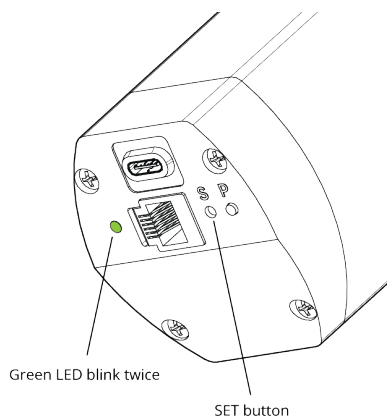


Press and hold the **SET** button until the **Status LED** blinks green twice.

2 Enter limit-setting mode

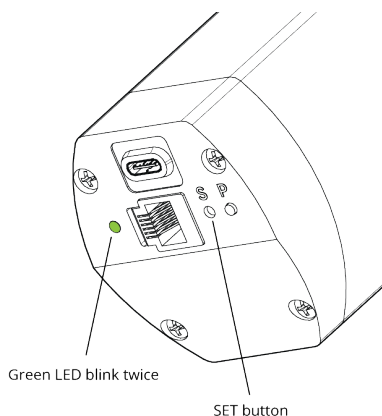

Tap the **SET** button again until the **Status LED** constantly blinks green.

3 Pull the Fabric to set limit

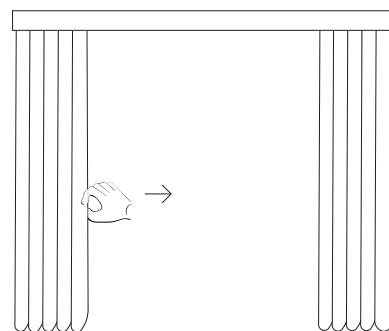

Pull the fabric toward CLOSED. The motor will close fully, then reopen fully. When it stops, both limits are saved automatically.

✓ DONE!

Wait until the motor finishes both movements. Do not pull or stop the curtain while it is learning.


*** Motor moving the wrong way?**

If the motor runs in reverse, you may want to change the setting before continuing:


1. Hold **P1 + P3** together until the motor jogs for 6 seconds.
2. Hold $\wedge + \vee$, together until the motor jogs again.
3. Hold — until the motor jogs to exit **CONFIG** mode.

Delete Channels


Delete Current Channel

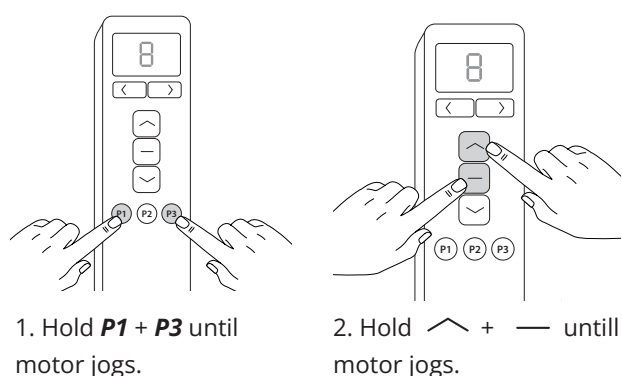

Delete All Channel

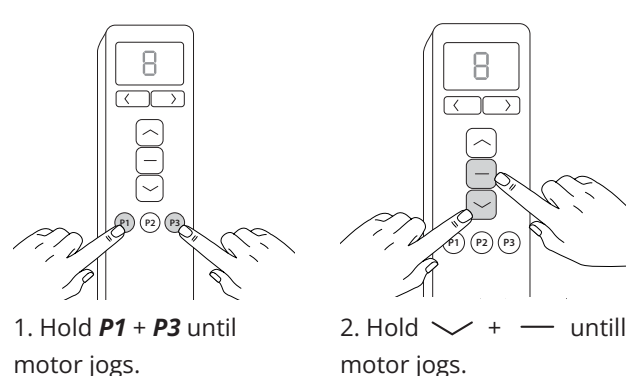

Remote Guide

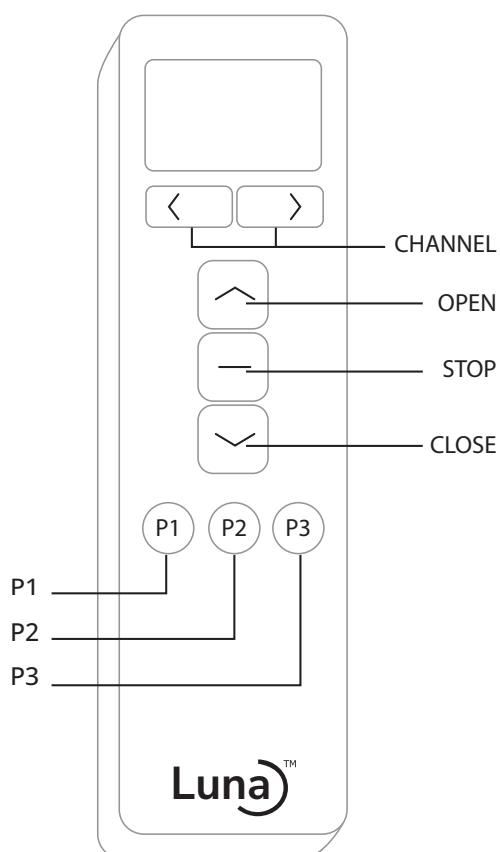

LEFT / RIGHT CHANNEL

Change the channel number.

OPEN

Open the curtain.

STOP

Stop the curtain.

CLOSE

Close the curtain.

P1 / P2 / P3

Programming buttons used for setup and deleting channels.